

RAPID RECESS


For Shower Pan-F installation

Installation Instructions

Rapid Recess
P.O.Box 2107, Silverthorne, CO 80498
rapidrecess.com



Tools Needed

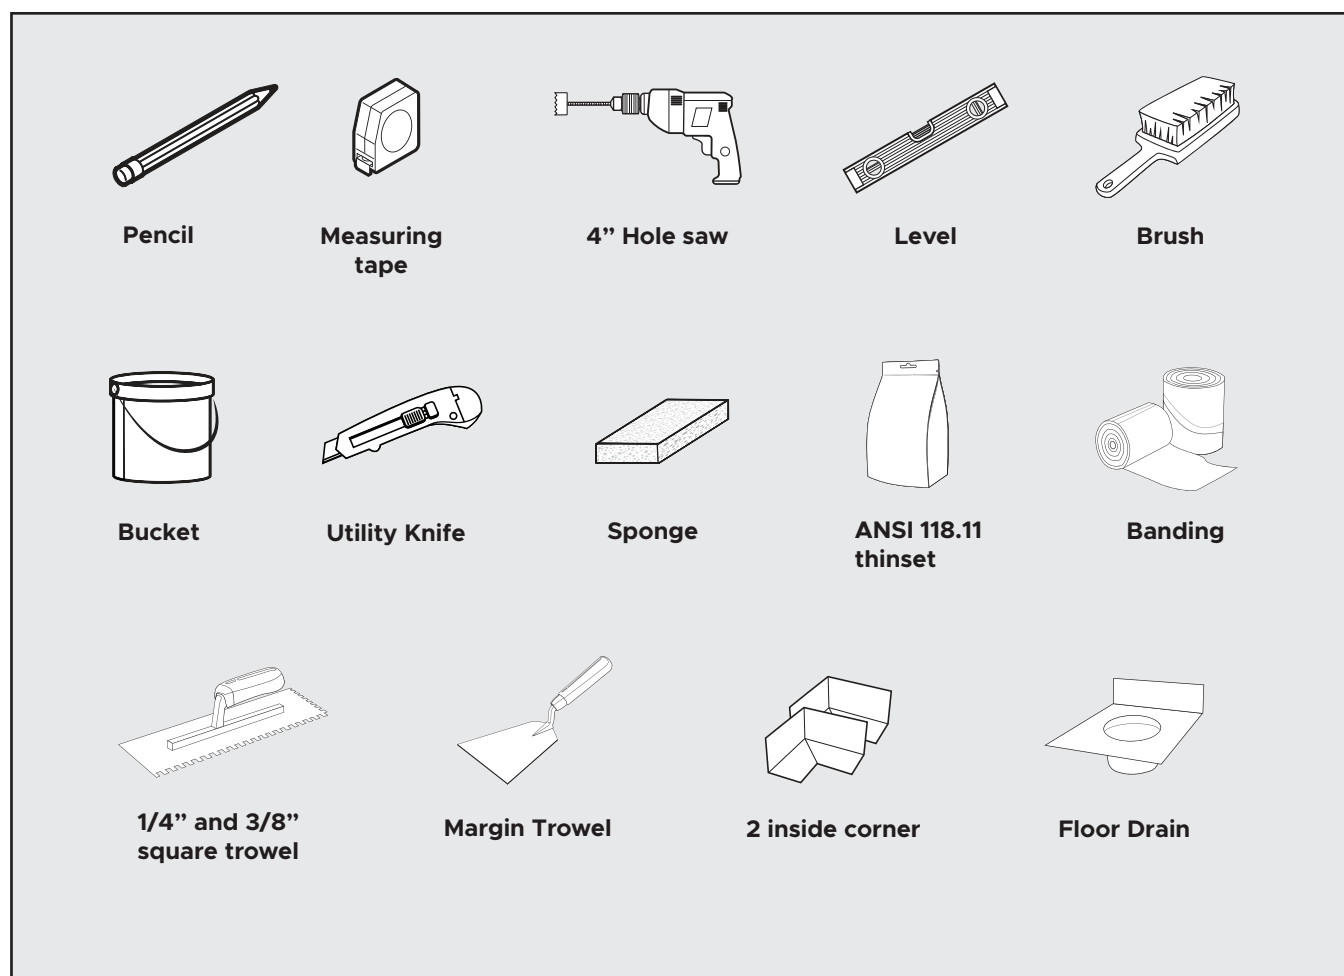


*After the subfloor is lowered using the **RAPID RECESS T-15 kit** (Model #RRT2CS), proceed to the following steps.

1. The **RAPID RECESS Shower Pan-F** (Model #RRSPT2CSP) comes in 39"x 62" with a waterproof membrane factory applied. Site sizeable by cutting with utility knife.
Note: Two ***Schluter-KERDI-KERECK-FI** inside corners and 16 feet of ***Schluter-KERDI-BAND** are needed to waterproof the tileable shower pan.


The **RAPID RECESS Shower Pan-F** (Model #RRSPT2CSP) is made to be used with the ***Schluter-KERDI-DRAIN-F** (model #KDF2FL).

The ***Schluter-KERDI-DRAIN** grate is sold separately.


The waterproof shower walls must be installed with ***Schluter-KERDI-BOARD**, ***Schluter-KERDI**, or ***Schluter-KERDI-DS** per ***Schluter-System** installation instructions first before continuing with shower pan installation.

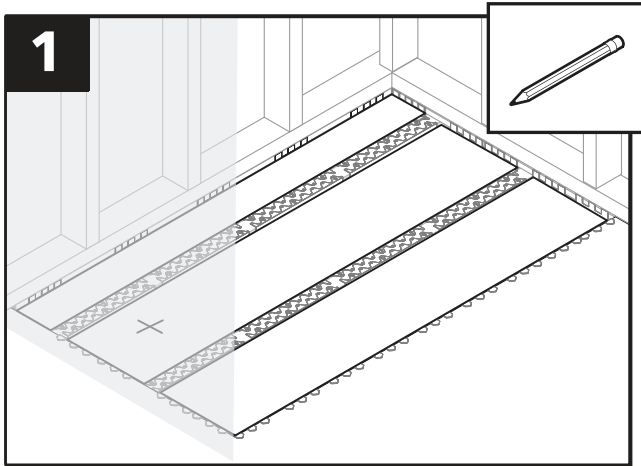


During the subfloor lowering process, waste line & P-trap were checked and moved to the desired place. Floor has been marked for the location of the waste line below.

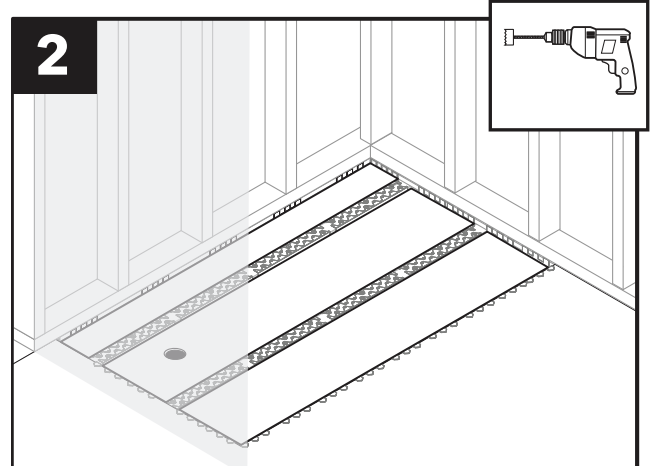


Drill a 4" access hole in the plywood as per ***Schluter-Systems** installation instructions for the ***Schluter-KERDI-DRAIN-F**.

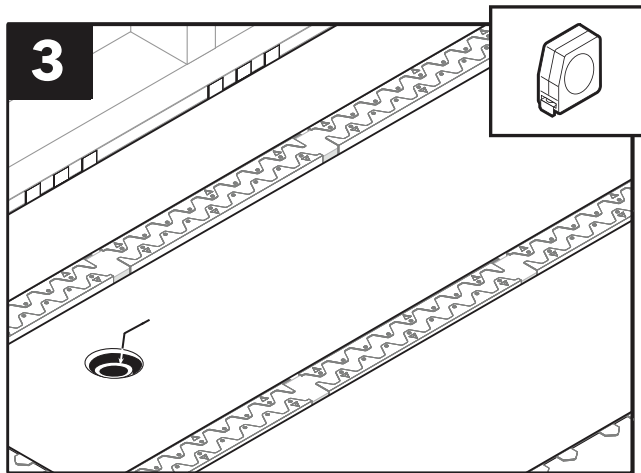


The 2" pipe coming out of the P-trap needs to be cut 3 1/4" below the top of the sub-floor. P-trap has to be firmly secured to the floor framing to prevent it from moving during drain installation process.

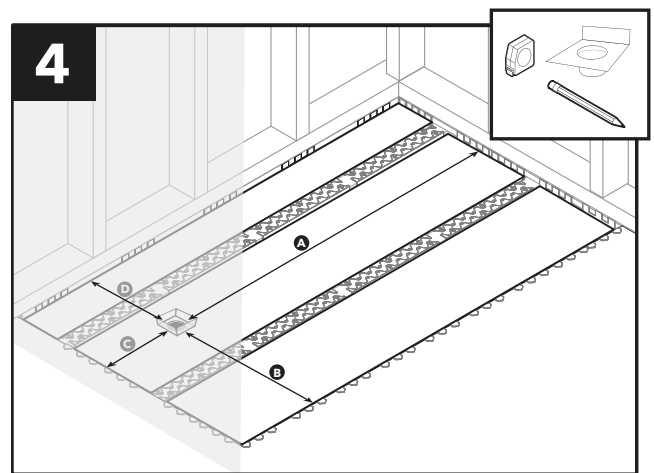


Dry fit the drain over the pipe and measure to all sides for cutting the shower pan, since it is oversized.

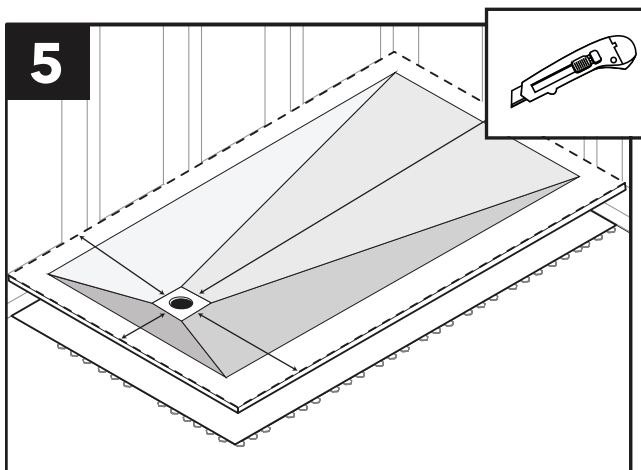


Cut shower pan to size with a utility knife using the measurements from step 4. Dry fit the shower pan with the drain in place.

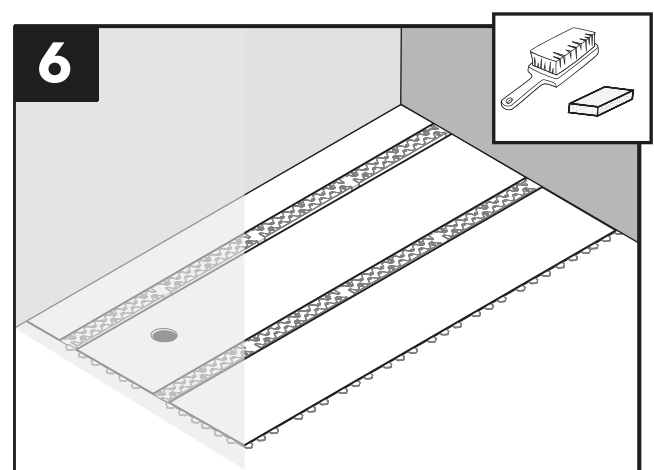


Clean the recessed area. Make sure the sub-floor is clean and free of contaminants.

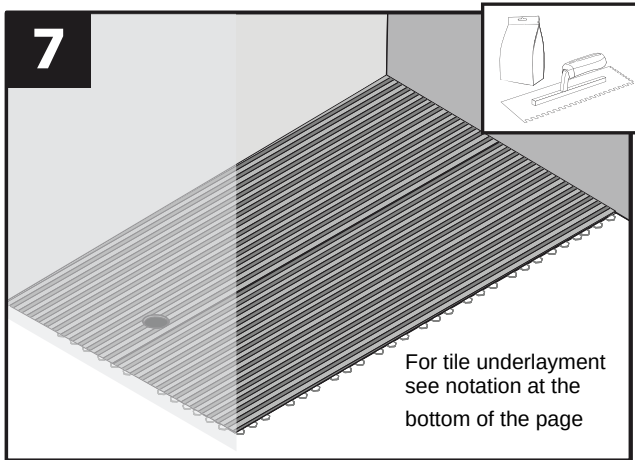


Using an ANSI 118.11 or self-curing, rapid setting thin set mortar, burn or key in the mortar using the flat side of the 1/4" x 3/8" notch trowel. Apply the thin set mortar, spreading directionally and uniformly over the shower pan area.

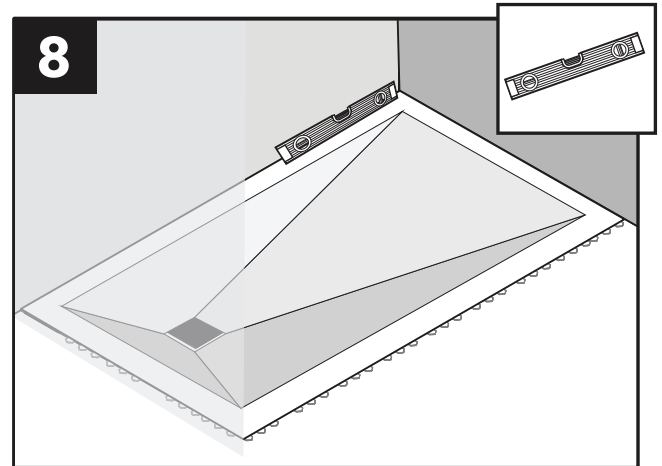

Solidly embed the **RAPID RECESS Shower Pan-F (Model #RRSPT2CSP)** into the wet mortar using a level or a straight edge or a 2 X 4 to avoid a point pressure and retain a constant slope. Ensure that the shower pan is level round the perimeter and has proper slope to the drain.

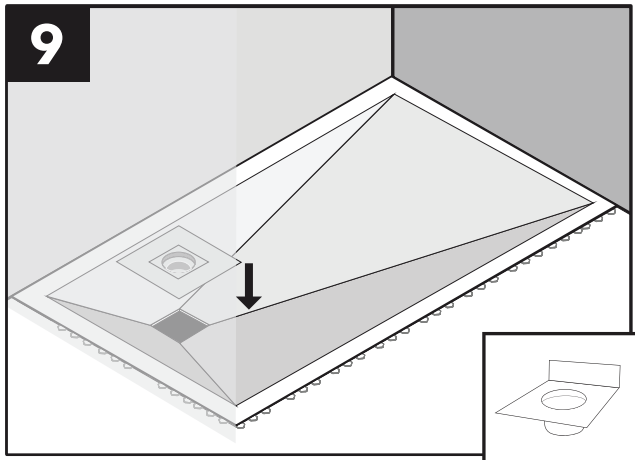

Install the ***Schluter-KERDI-DRAIN-F** as per ***Schluter-Systems** installation instructions. Make sure that the drain is fully supported.

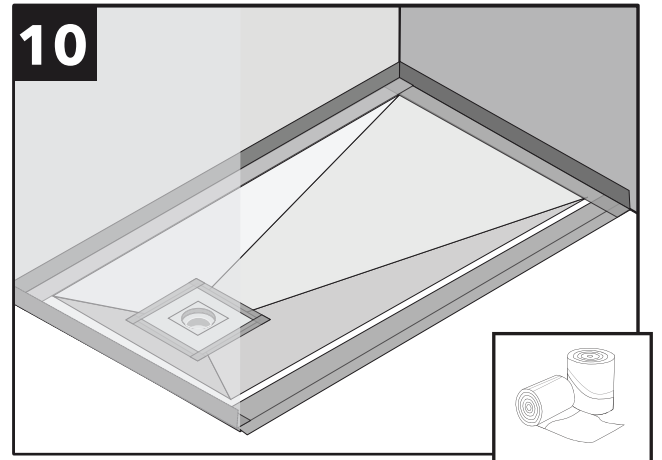

Install the ***Schluter-KERDI-KERECK-FI** and ***Schluter-KERDI-BAND** as per ***Schluter-Systems** installation instructions.

Note: Use the same underlayment under the shower pan as used throughout the rest of the bathroom floor. This step allows the shower pan tile and bath room tile thickness to match. If you are using ***Schluter-DITRA-HEAT**, contact RR tech support at techsupport@rapidrecess.com

*Disclaimer: **SCHLUTER, KERDI and KERDI-LINE** are trademarks of **Schluter-systems**. **RAPID RECESS** is not affiliated with **Schluter-Systems**. **RAPID RECESS** products are not manufactured, distributed, warranted or endorsed by **Schluter-Systems**.

