

RAPID RECESS


For Shower Pan-FC installations

Installation Instructions

Rapid Recess
P.O.Box 2107, Silverthorne, CO 80498
rapidrecess.com




Tools Needed

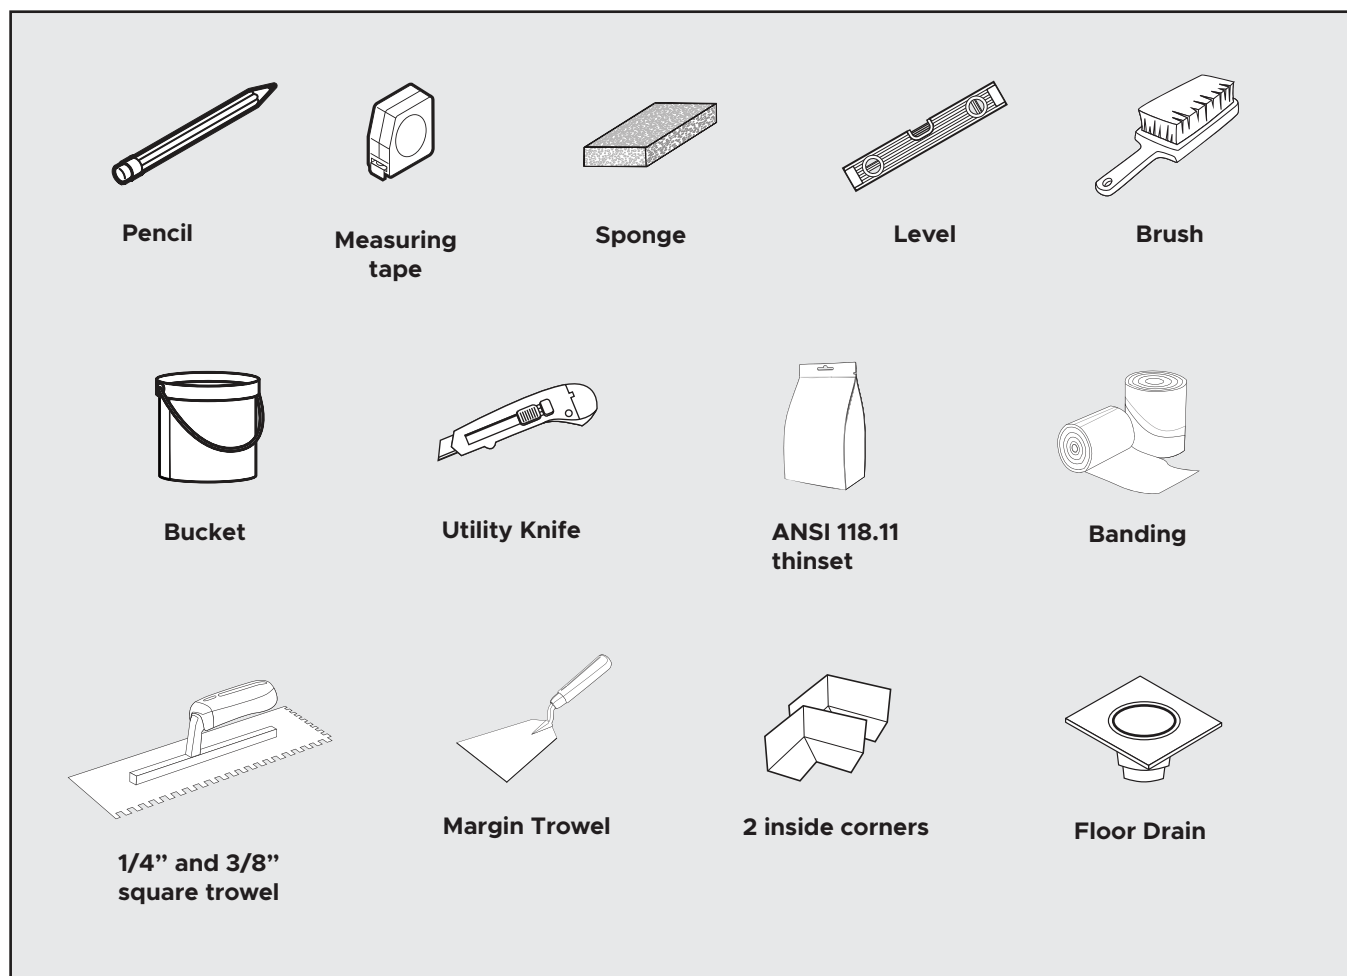


1. The **RAPID RECESS Shower Pan-FC** (Model #RRSPT2CSC) comes in 39"x 62" waterproof membrane factory applied. Site sizeable by cutting with utility knife.
Note: Two ***Schluter-KERDI-KERECK-FI** inside corners and 16 feet of ***Schluter-KERDI-BAND** are needed to waterproof the tileable shower pan.
2. The **RAPID RECESS Shower Pan-FC** (Model #RRSPT2CSC) is made to be used with the ***Schluter-KERDI-DRAIN-F** (model #KDF2FL).
The ***Schluter-KERDI-DRAIN** grate is sold separately.

The waterproof shower walls must be installed with ***Schluter-KERDI-BOARD**, ***Schluter-KERDI**, or ***Schluter-KERDI-DS** per ***Schluter-System** installation instructions first before continuing with shower pan installation.


Site Preparation

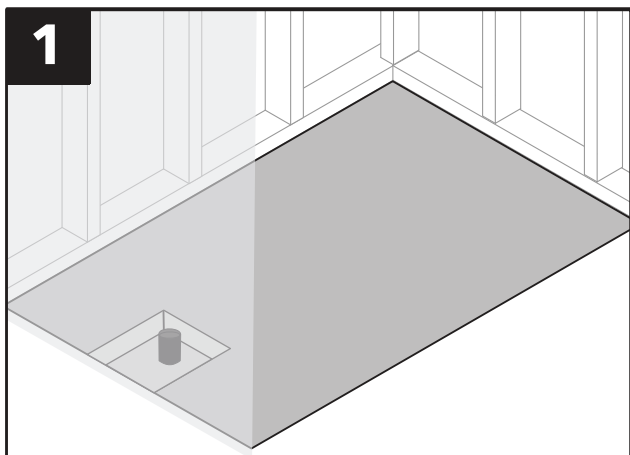


Move the P-trap and pipe to the desired location in the tub shoe and level concrete floor if necessary.

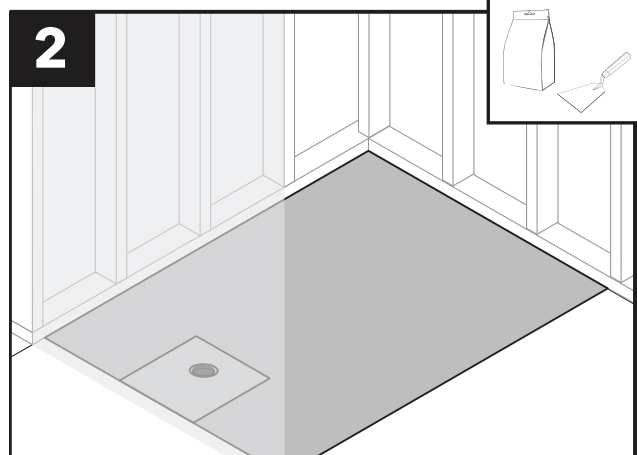


Fill in the tub shoe with concrete or mortar flush with the leveled floor around. Make sure to leave enough space around the pipe for gluing the ***Schluter-KERDI-DRAIN-F** over it.

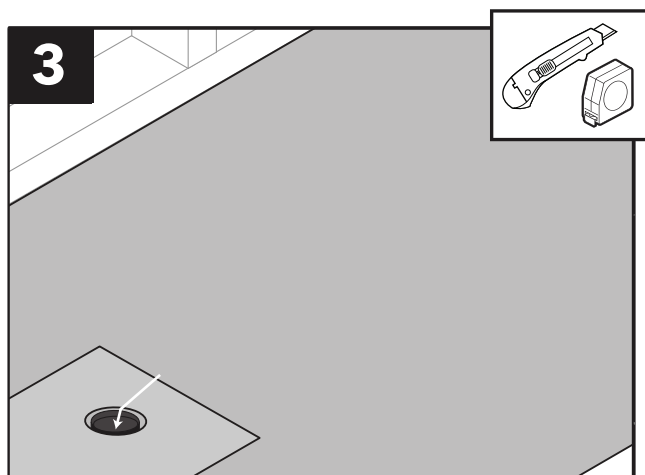


Cut top of the pipe 3.5" below the leveled concrete floor to receive ***Schluter-KERDI-DRAIN-F**.

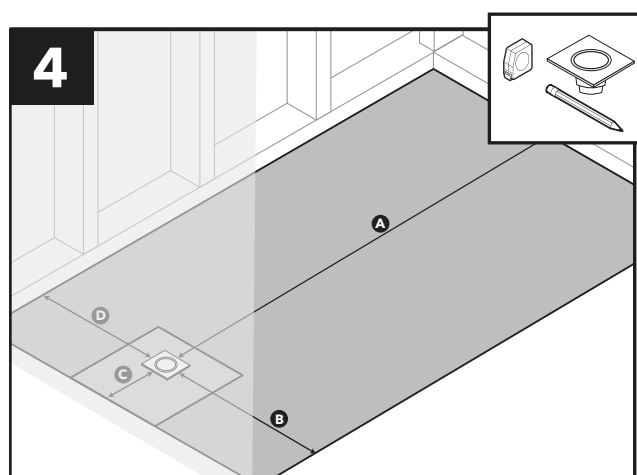


Dry fit the drain over the pipe and measure to all sides for cutting the shower pan, since it is oversized.

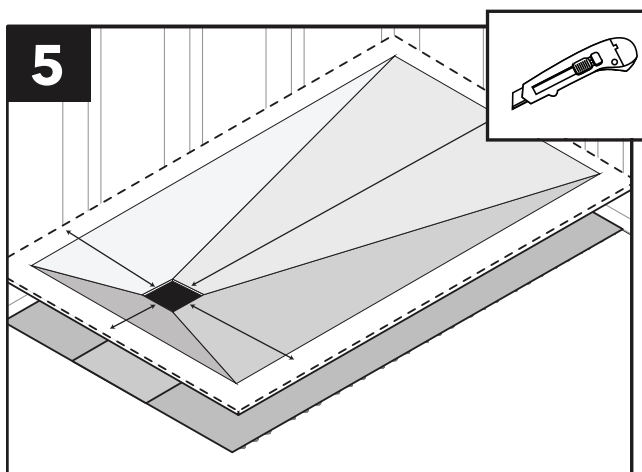


Cut shower pan to size with a utility knife using the measurements from step 4. Dry fit the shower pan with the drain in place.

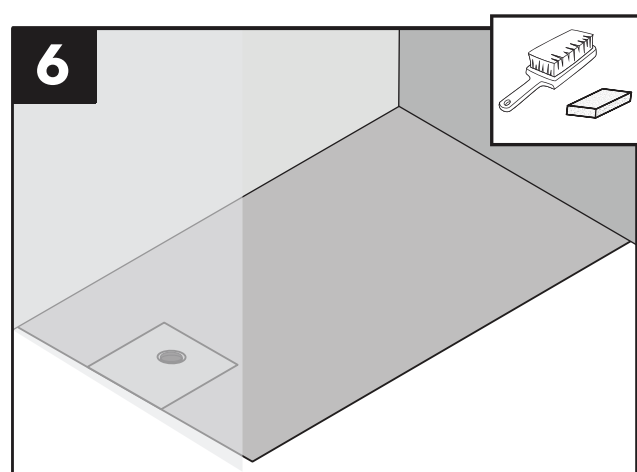


Clean the installation area. Make sure the sub-floor is clean and free of contaminants.

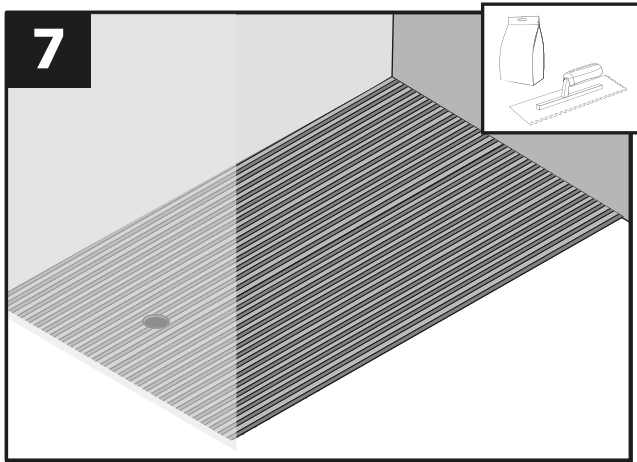


Using an ANSI 118.11 or self-curing, rapid setting thin set mortar, burn or key in the mortar using the flat side of the 1/4" x 3/8" notch trowel. Apply the thin set mortar, spreading directionally and uniformly over the shower pan area.

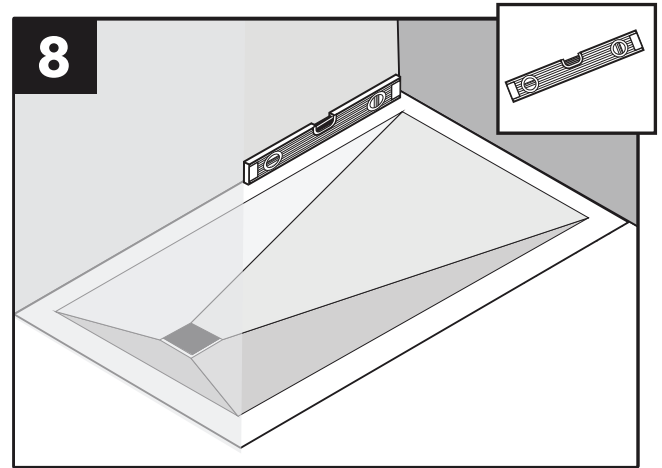

Solidly embed the **RAPID RECESS Shower Pan-FC (Model #RRSPT2CSC)** into the wet mortar using a level or a straight edge or a 2 X 4 to avoid a point pressure and retain a constant slope. Ensure that the shower pan is level round the perimeter and has proper slope to the drain.

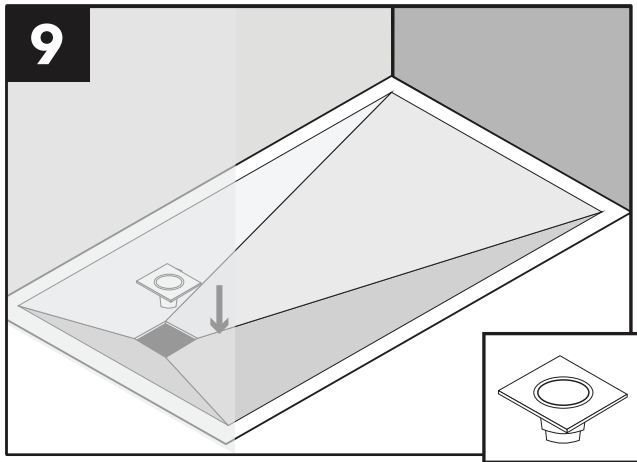

Install the ***Schluter-KERDI-DRAIN-F** as per ***Schluter-Systems** installation instructions. Make sure that the drain is fully supported.

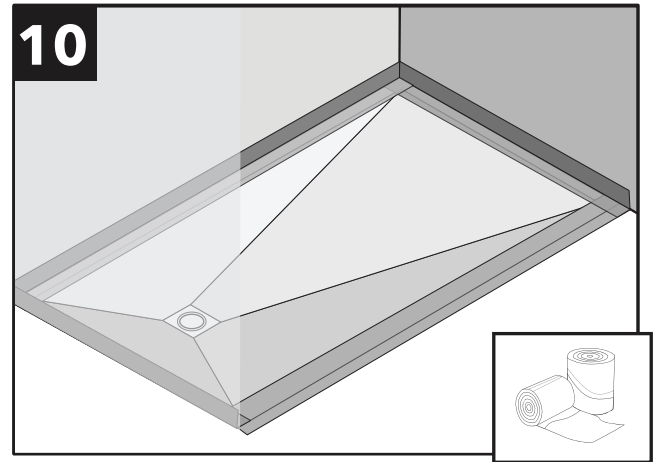

Install the ***Schluter-KERDI-KERECK-FI** and ***Schluter-KERDI-BAND** as per ***Schluter-Systems** installation instructions.

Note: Use the same underlayment under the shower pan as used throughout the rest of the bathroom floor. This step allows the shower pan tile and bathroom tile thickness to match.

If you are using ***Schluter-DITRA-HEAT**, contact Rapid Recess tech support at techsupport@rapidrecess.com.

*Disclaimer: **SCHLUTER, KERDI and KERDI-LINE** are trademarks of **Schluter-systems**. **RAPID RECESS** is not affiliated with **Schluter-Systems**. **RAPID RECESS** products are not manufactured, distributed, warranted or endorsed by **Schluter-Systems**.

