

RAPID **RECESS**


For Shower Pan-K installation

Installation Instructions

Rapid Recess
P.O.Box 2107, Silverthorne, CO 80498
rapidrecess.com




Tools Needed

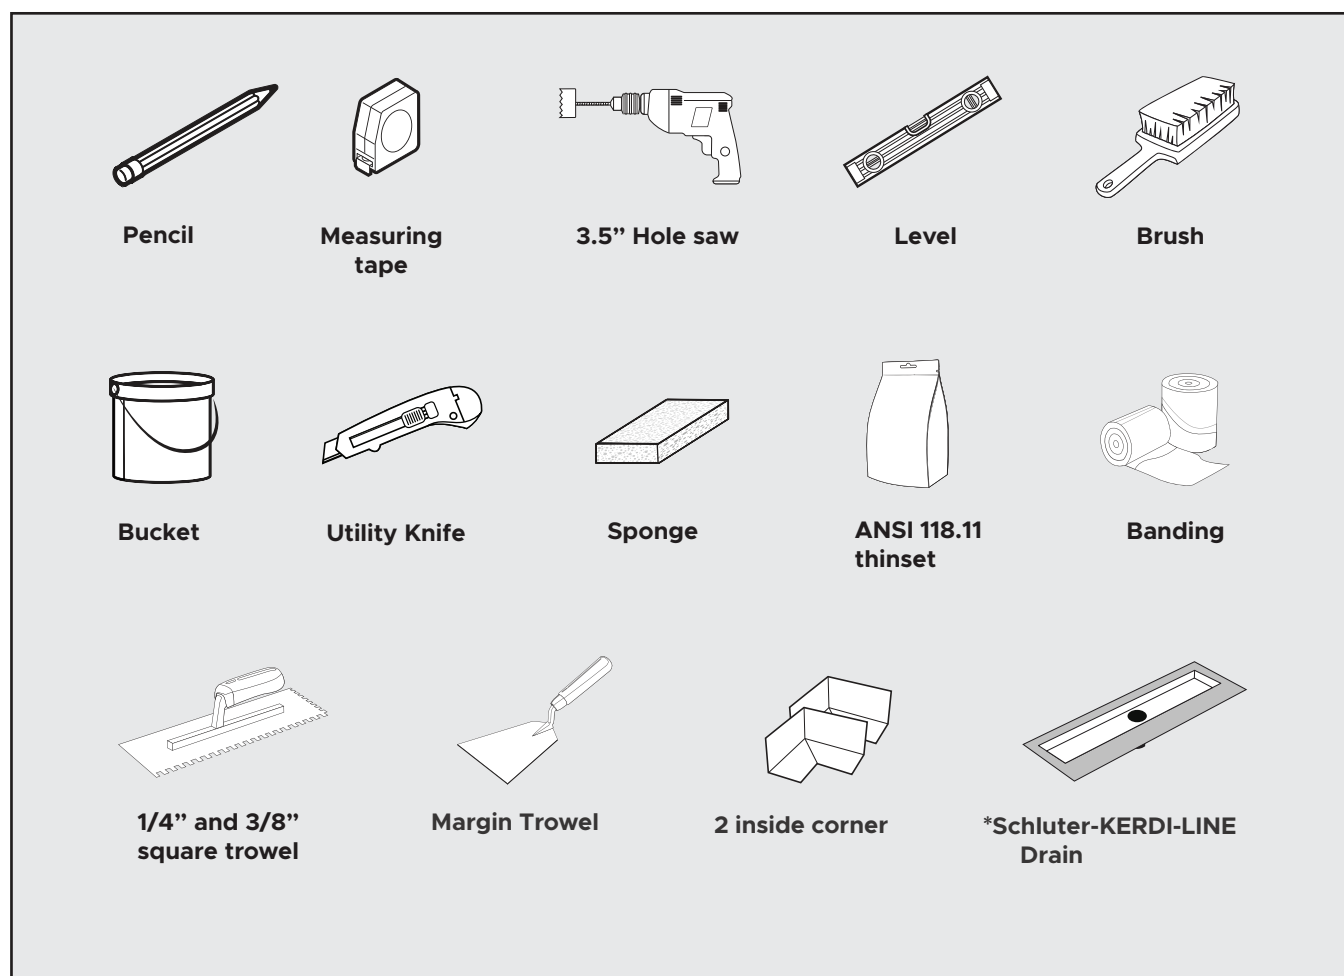


*After the subfloor is lowered using the **RAPID RECESS K-15 kit** (Model #RRT2CSLDK), proceed to the following steps.

1. The **RAPID RECESS Shower Pan-K** (Model #RRSPT2CSK) comes in 39"x 62" with a waterproof membrane factory applied. Site sizeable by cutting with utility knife.
Note: Two ***Schluter-KERDI-KERECK-FI** inside corners and 16 feet of ***Schluter-KERDI-BAND** are needed to waterproof the tileable shower pan.
2. The **RAPID RECESS Shower Pan-K** (Model #RRSPT2CSK) is made to be used with the ***Schluter-KERDI-LINE-Drain** (model #KL1V60E140).
The ***Schluter-KERDI-DRAIN** grate is sold separately.
3. The waterproof shower walls must be installed with ***Schluter-KERDI-BOARD**, ***Schluter-KERDI**, or ***Schluter-KERDI-DS** per ***Schluter-System** installation instructions first before continuing with shower pan installation.

Site Preparation

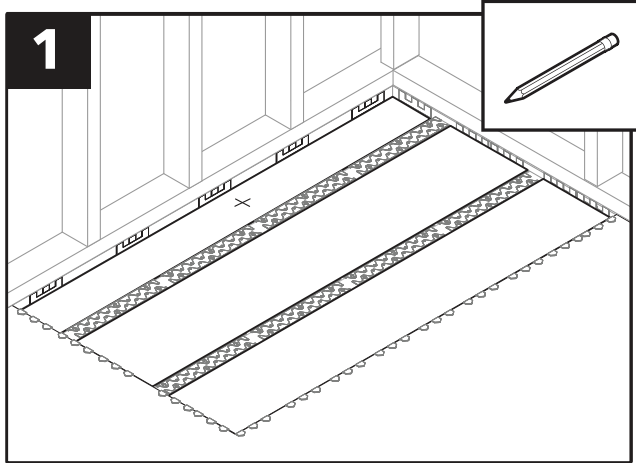


During floor lowering process waste line and P-trap were checked and moved to the desired place and plywood marked for drain location.

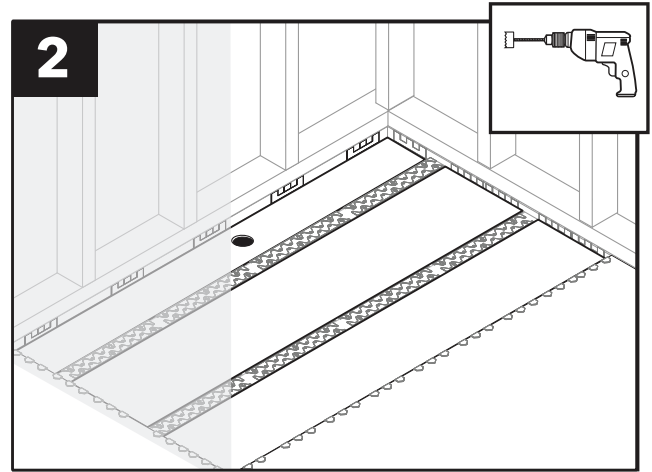


Drill a 4" access hole in the plywood per Schluter-Systems installation instructions for the ***Schluter-KERDI-LINE-Drain**.


The hole needs to be centered over the waste line.

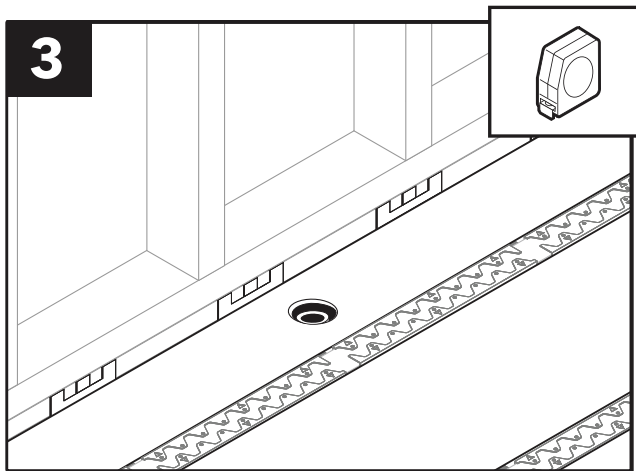


The 2" pipe coming out of the "P" trap needs to be cut 3 1/4" below the top of the subfloor and P-trap has to be firmly secured to the floor framing to prevent it from moving during drain installation process.

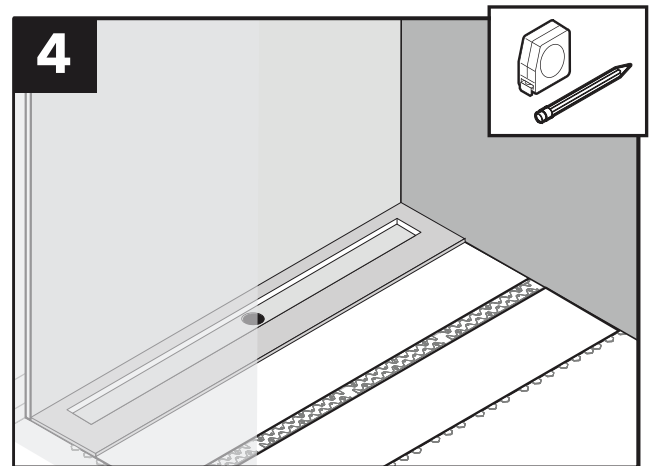


Dry fit the drain support frame over the pipe and measure and cut the drain support frame to fit the deeper recess at the back wall.

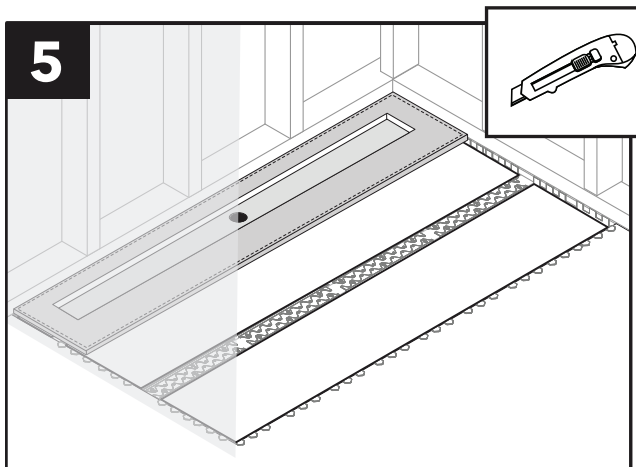


Dry fit the drain support and make sure that the waste line is centred on the opening for the drain body.

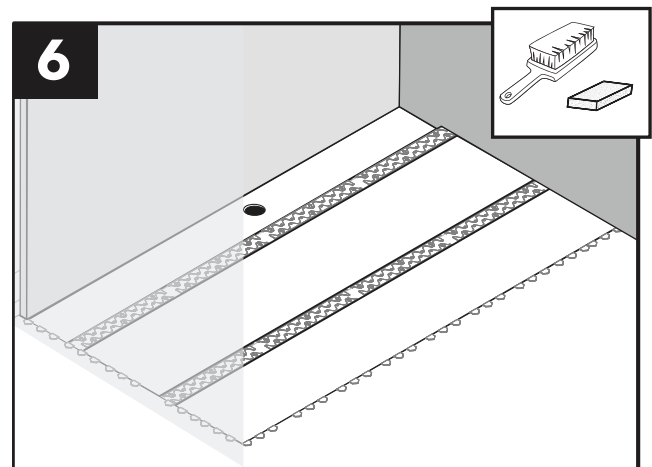


Clean the recessed area. Make sure the sub-floor is clean and free of contaminants.

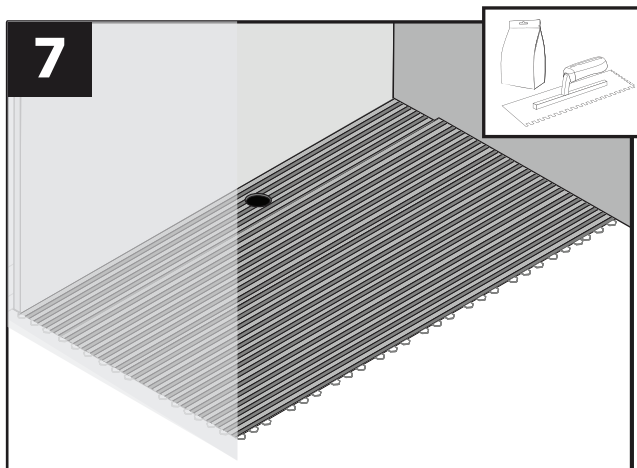


Using an ANSI 118.11 or self-curing, rapid-setting thinset mortar, burn or key in the mortar using the flat side of the 1/4" x 3/8" notch trowel. Apply the thinset mortar, spreading directionally and uniformly over the shower pan area.

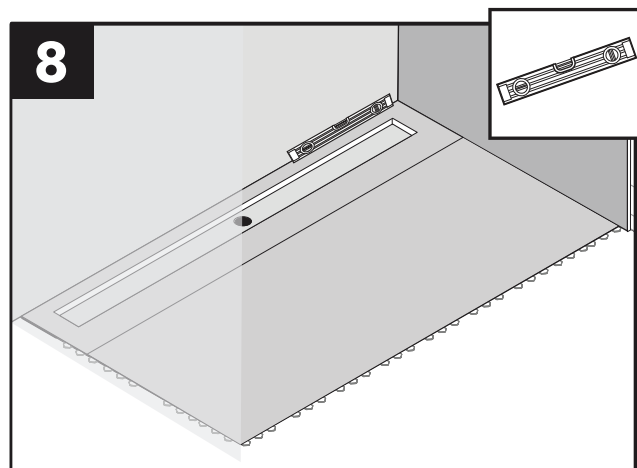

Solidly embed the **RAPID RECESS Shower Pan-K** (Model #RRSPT2CSK) into the wet mortar using long instrument to avoid a point pressure and retain a constant slope. Ensure the shower pan has proper slope to the drain.

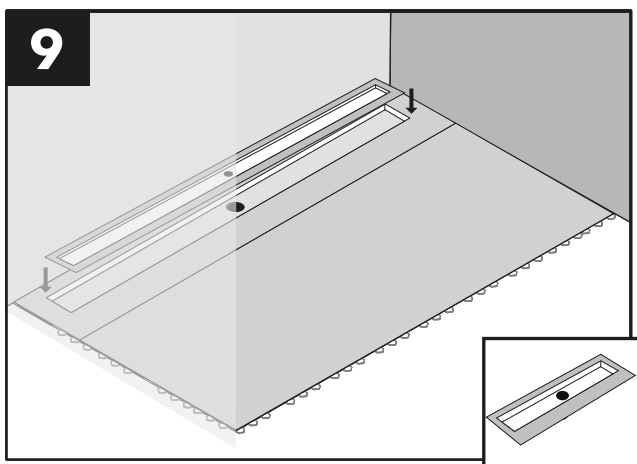

Install the ***Schluter-KERDI-LINE Drain** as per ***Schluter-Systems** installation instructions. Make sure that the drain is fully supported.

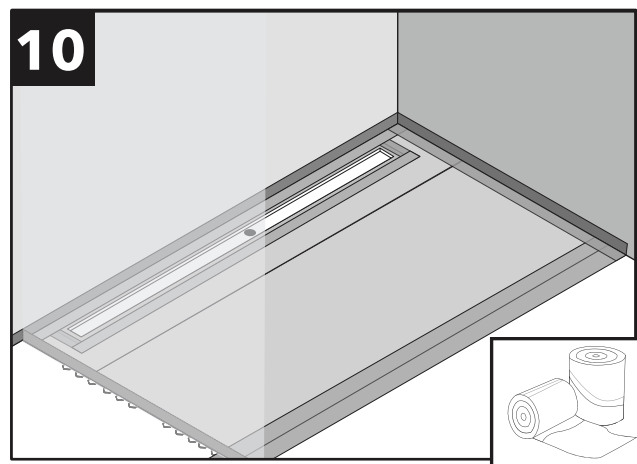

Install the ***Schluter-KERDI-KERECK-FI** and ***Schluter-KERDI-BAND** as per ***Schluter-Systems** installation instructions.

Note: Use the same underlayment under the shower pan as used throughout the rest of the bathroom floor. This step allows the shower pan tile and bathroom tile thickness to match.

If you are using ***Schluter-DITRA-HEAT**, contact Rapid Recess tech support at techsupport@rapidrecess.com.

*Disclaimer: **SCHLUTER, KERDI and KERDI-LINE** are trademarks of **Schluter-systems**. **RAPID RECESS** is not affiliated with **Schluter-Systems**. **RAPID RECESS** products are not manufactured, distributed, warranted or endorsed by **Schluter-Systems**.

